

Digital Pen

BASIC OPERATION GUIDE

ENGLISH

INTRODUCTION

Thank you for acquiring the Digital Pen for use with DT Research tablets to capture handwritten notes and drawings. The Digital Pen is an active pen based on capacitive-coupled sensing technology for use on capacitive touch screens. Designed for ease of use, the Digital Pen provides an enhanced user experience to increase work efficiency and enables a natural handwriting style.

Package Contents

1. One DT Research Digital Pen
2. One AAAA battery (inside Pen)
3. One Pen Clip

The Digital Pen



Pen Button

Eraser Button

Pen Tip

- **Pen Button**
Quick access to the right-click menu: Press and hold the button, touch the screen with the Pen tip and release the button to bring up the right-click menu.
- **Eraser Button**
Works as eraser to delete markings made with Digital Pen on the screen.
- **Pen Tip**
Pressure-sensitive tip allows natural handwriting and drawing. Combined with apps that support pen pressure, the Digital Pen works like a real pen.



Power On/Off

Click the Pen Button to turn the Digital Pen on. After two minutes without using the pen, the pen will automatically power off.

Using the Pen Clip

- Attach the Pen Clip to the rubber handstrap on the back of your tablet.
- Push and insert the Digital Pen into the Pen Clip from the left or right side. Or, directly press the Digital Pen into the Pen Clip from the top.



NOTE: Do not place the Digital Pen with the buttons facing inside the Pen Clip, as this might damage the buttons

Using the Digital Pen with the Tablet

The Digital Pen is designed to work with your tablet automatically. Bluetooth or Wi-Fi connection is not required. The Pen works once it is close to the touch screen.

NOTE: While using the Digital Pen, the screen will not work with the finger touch.

Battery Replacement

- Unscrew the top cap of the Digital Pen.
- Remove the battery, and then replace with a new AAAA battery.



Product Care

Read the instructions carefully. Failure to follow the instructions could result in damage to the Digital Pen and voiding its warranty.

1. Only use the Digital Pen in accordance with the operation guide.
2. Do not attempt to open or disassemble the Digital Pen (except to change the battery) as this will void the warranty.
3. Do not expose the Digital Pen to extreme temperatures or direct sunlight.
4. If there is any damage or broken parts, do not continue to use the product. Consult the provider if the device needs repair.
5. Clean with a dry cloth. Do not use water, soap, detergent or other chemicals.

Specifications

Pen Tip	Diameter: 0.059 in/ 1.5mm
Buttons	2 side buttons (as right-click and eraser)
Battery	1 AAAA, replaceable
Color	Black
Dimensions	Length: 5.5 in/ 140 mm (including pen tip) Diameter: 0.38 in/ 9.7 mm
Weight	0.055 lbs/ 25 g
Operating temperature	0°C ~ 50 °C
Storage temperature	-30°C ~ 70°C