

ACCESSORIES:

**Charging Cradle**

Desktop cradle with rear pocket battery charger.
Input: 100 - 240V AC; output: 5V DC, 3A.

**Stylus**

Stylus for capacitive display devices.

**Battery**

Replaceable, rechargeable Li-Ion battery 2500mAh, 3.7V.

**Rubber Jacket**

For handling protection.

Handheld POS Terminal

DT432SC-MD/ DT432SQ-MD

BASIC OPERATION GUIDE

ENGLISH



INTRODUCTION

Thank you for acquiring the DT432SC-MD/ DT432SQ-MD. The DT432SC-MD/ DT432SQ-MD offers a 4.3" capacitive touch display and built-in Wi-Fi and Bluetooth connectivities in a slim and lightweight package. The DT432SC-MD/ DT432SQ-MD has an option for a barcode scanner and enables efficient point-of-service/ care applications, inventory management, and field services.

PACKAGE CONTENTS

1. One DT432SC-MD/ DT432SQ-MD
2. One battery pack
3. One AC-DC adapter
4. Basic operation guide

* The actual package contents may vary depending on the configuration acquired.

PRECAUTIONS

- Always exercise care when operating and handling the DT432SC-MD/ DT432SQ-MD.
- Do not disassemble any portion of the DT432SC-MD/ DT432SQ-MD. It will void any product warranty on DT432SC-MD/ DT432SQ-MD.
- Do not use any power adapter or charging cradle other than the one provided with the device or acquired from the manufacturer or its partners.
- In the unlikely event that abnormal noise, strange odor, or smoke is present, immediately power down the DT432SC-MD/ DT432SQ-MD and disconnect all power sources. Please report the problem to your device provider immediately.

DT Research, Inc.

2000 Concourse Drive, San Jose, CA 95131 <http://www.dtresearch.com>
Copyright © 2015, DT Research, Inc.

BOG 09151DT432SC-MDDT432SQ-MDENG

DT432SC-MD



Input/ Output Ports

A	2D Barcode Scanner (optional)
B	Microphone
C	Speaker
D	Battery (inside)
E	Mini USB Port
F	Micro SD Slot

Button Functions

BUTTON	ACTION
1	Power Button
2	Trigger Buttons
3	On Screen Keyboard
4	Home
5	Search
6	Back

DT432SQ-MD



Input/ Output Ports

A	2D Barcode Scanner (optional)
B	Microphone
C	Speaker
D	Battery (inside)
E	Mini USB Port
F	Micro SD Slot

Button Functions

BUTTON	ACTION
1	Power Button
2	Trigger Buttons
3	On Screen Keyboard
4	Home
5	Search
6	Back